
# **What is a Hardened Home?**

Construction materials and the quality of the defensible space surrounding it are what gives a home the best chance to survive a wildfire. Embers from a wildfire will find the weak link in your home's fire protection scheme and gain the upper hand because of a small, overlooked or seemingly inconsequential factor. However, there are measures you can take to safeguard your home from wildfire. While you may not be able to accomplish all the measures listed below, each will increase your home's, and possibly your family's, safety and survival during a wildfire.

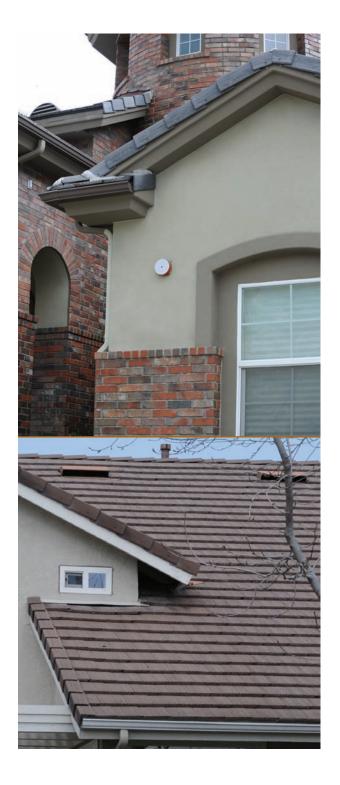

# **ROOFS**

Roofs are the most vulnerable surface where embers land because they can lodge and start a fire. Roof valleys, open ends of barrel tiles and rain gutters are all points of entry.

## **EAVES**

Embers can gather under open eaves and ignite exposed wood or other combustible material.

#### **VENTS**

Embers can enter the attic or other concealed spaces and ignite combustible materials. Vents in eaves and cornices are particularly vulnerable, as are any unscreened vents. New vents have been developed that prevent flame and embers from getting through to the attic.

## WALLS

Combustible siding or other combustible or overlapping materials provide surfaces or crevices for embers to nestle and ignite.

# **WINDOWS and DOORS**

Embers can enter gaps in doors, including garage doors. Plants or combustible storage near windows can be ignited from embers and generate heat that can break windows and/ or melt combustible frames.

## **BALCONIES and DECKS**

Embers can collect in or on combustible surfaces or the undersides of decks and balconies, ignite the material and enter the home through walls or windows.

To harden your home even further, consider protecting your homes with a residential fire sprinkler system. In addition to extinguishing a fire started by an ember that enters your home, it also protects you and your family year-round from any fire that may start in your home.

All suggestions and requirements are based on State Codes and Regulations, specifically the California Building Code Chapter 7A, California Fire Code, and Title 14 Fire Safe Regulations. Contact your local fire and building department for specific requirements or recommendations for your community.